

USER'S MANUAL FOR DM SERIES

Function of safe:

- 1) Code Setting: Personal Code: 4-6 digits. (Factory setting: 1234), Master Code: 6 digits. (Factory setting: 888888),
- 2) With code hidden function
- 3) Keypad lockout for 5 minutes and alarm for 1 minute after 3 times wrong try

Opening

First opening: Open the door with emergency key, and then install 4 AA batteries into the internal battery case.

Press ► on the panel to wake up the safe, back light on, you can see the number clearly. Input original code (Factory code:1234) and ► You will hear two short 'beep' and the panel shows "**OPEN**" if the code is correct. Then it will show "**OPENED**", the drawer will be pop out automatically. You will see '**E-CODE**' showed on the panel and hear three short beep if the code is wrong.

Close the door

Push the drawer to close position, press ► to wake up the safe, and input your code (4-6 digits), then press ► again, the panel shows "**CLOSE**" then "**CLOSED**", the drawer is closed automatically.

Code setting

Change Personal Code:

Under open situation, press the ► then input your new code (within 4-6 digits) and press ► again, to show "**CLOSED**". Now you will see your new code on the displayer, which means your operation succeeds.

Change Master Code:

Under open situation, press the ► and input the original Master Code (Factory setting: 888888), then press ◀ you will hear two short beep and the safe shows 'NEU'. (If the Master Code is wrong, press ◀ will delete one digit just input). Input your new Master code and press ►, it will show 'AGAIN', input your new Master Code and press ► again, when you hear two short beep and the safe shows 'DONE' means your operation succeed.

Tips: After you change the code, please do not shut the drawer immediately. Follow the below steps at least 3 times to make sure your new code works.

Press ► the back light on, input your new code and ► The safe will beep two times if the code is correct, you can see "OPEN", that means the new code works now.

If the code is wrong, the safe show "E-CODE" and you will hear beep 3 times. Please follow the steps of "CODE SETTING" to change the code again.

Emergency opening

If you have forgotten your personal code or other reasons make the safe can't be opened, you can use emergency key or override master code to open the door.

Code hidden function

Press ► to wake up the safe, then input ◀ button two times and ► one time, you will hear beep two times. It comes into hidden code function. Repeat above steps, the code will be recovered.

Keypad Lockout

After input 3 times wrong code, the keypad will be locked for 15mins. The safe will show "HOLD **", "***" is the time when the keypad will be released.

Cautions

1. Low voltage: when it lowers than 5V, whether open or close, it will show "LO-BAT" on the displayer.
2. "◀" is also a deletion key; press one time will delete one digit input.

Contact details:



Authorised Supplier of Platinum Safes
Aus Lock & Safe Pty Ltd
F 16, 47-51 Little Boundary Rd, Laverton Nth, VIC, AUSTR, 3026

+61 3 9318 9711
+61 3 9318 9877
sales@auslock.com.au
www.auslock.com.au