


## CHANGING THE BATTERY

This unit runs on a **9V** alkaline battery. It is recommended that either 'Duracell' or 'Energizer' brands be used.

To change the battery, please refer to the diagram below.

- Simply slide the entry pad housing up and carefully pull it away from the mounting surface to expose the battery compartment.
- The battery connector is easily removed by unclipping it from the terminals on top of the battery. Care must be taken to ensure that the wires leading from the battery connector to the entry pad are not pulled out from the housing.
- Once the battery has been changed, carefully position the entry pad back over the mounting screws and slide the entry pad back into position. Ensure there are no wires or cables trapped between the entry pad and the safe door.

### CHANGING THE BATTERY

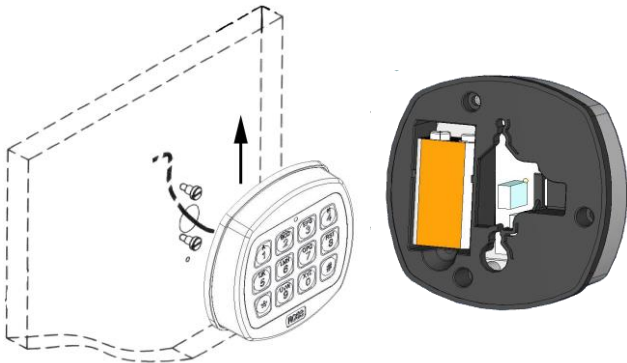

## Specifications

**Power Supply : DC 9V**

**Power Supply Range : DC 4.5 – 12V**

**Standby Current : < 15 mA**

**Active Current : < 20 mA**

**Battery Low Voltage : 5.2 +/- 0.2 V**

**Working Temperature : -25 ° C ~ + 60 ° C**

**Working Humidity : < 95%**

**Storage Temperature : - 45 ° C ~ + 85 ° C**

**Manager/User Code Length : 6 Digits**

 
**Distributor :-**




**AUSTRALIAN MADE**

**ROSS** **K.J.ROSS SECURITY LOCKS PTY.LTD.**  
A.B.N. 23 609 454 458  
Lock Manufacturer • Specialist in Safe & Vault Locks

29 Henderson Road, Knoxfield, Victoria 3180, Australia.  
Telephone :- + 61 3 9763 1796 Fax :- + 61 3 9763 4223  
Email :- rosslocks@rosslocks.com.au Web :- www.rosslocks.com.au



Doc.Version 2.1

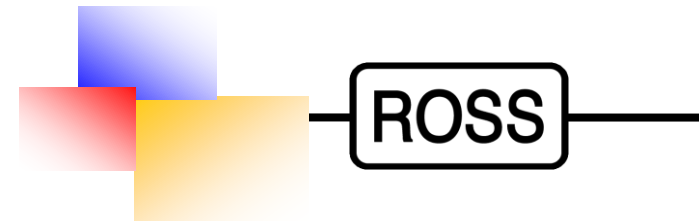

## 1000-SERIES ELECTRONIC COMBINATION SAFE LOCK



## OPERATING INSTRUCTIONS

## MANAGER STARTUP INSTRUCTIONS

### TO OPEN FOR THE FIRST TIME

Using the factory set manager code –

- Enter ( 1 2 3 4 5 6 ) 2 beeps sound.
- The handle can now be turned to open the safe door.

### TO CHANGE THE MANAGER CODE

**Always perform the following instructions with safe door open.**

- Enter ( 0 0 0 0 0 ) 2 beeps sound.
- Enter the factory set manager code ( 1 2 3 4 5 6 ) 2 beeps sound.
- Enter the new 6 digit manager code. 1 beep sounds.
- To verify, re-enter the same manager code. 1 beep sounds.
- Enter the new manager code to verify the new code has been accepted. 2 beeps sound.

### TO ADD THE USER CODE FOR THE FIRST TIME

- Enter the manager code, and on the last digit of the code, hold the button down until 2 set of 2 beeps are sounded.
- Enter ( 1 ) 2 beeps sound.
- Enter the 6 digit user code. 1 beep sounds.
- To verify, re-enter the same user code. 1 beep sounds.
- Enter the new user code to verify the new code has been accepted. 2 beeps sound.

## MANAGER OPERATIONAL INSTRUCTIONS

### TO CHANGE THE USER CODE

**Always perform the following instructions with safe door open.**

- Enter ( 0 0 0 0 0 ) 2 beeps sound.
- Enter the user code. 2 beeps sound.
- Enter the new 6 digit user code. 1 beep sounds.
- To verify, re-enter the same user code. 1 beep sounds.
- Enter the new user code to verify the new code has been accepted. 2 beeps sound.

### TO DISABLE THE USER CODE

- Enter the manager code, and on the last digit of the code, hold the button down until 2 set of 2 beeps are sounded.
- Enter ( 2 ) 2 beeps sound.
- Enter the user code to verify this code has been disabled.

### TO ENABLE THE USER CODE

- Enter the manager code, and on the last digit of the code, hold the button down until 2 set of 2 beeps are sounded.
- Enter ( 1 ) 2 beeps sound.
- Enter the user code to verify this code has been enabled.

### TO DELETE THE USER CODE

- Enter the manager code, and on the last digit of the code, hold the button down until 2 set of 2 beeps are sounded.
- Enter ( 3 ) 2 beeps sound.
- Enter the user code to verify this code has been deleted.
- To re-enter the user code, follow the procedure, “ To add the user code for the first time”.

## OPERATIONAL FEATURES

### STANDBY MODE

- There is a time limit of 15 seconds allocated to complete an instruction.
- 2 beeps will sound to indicated you will need to re-start the instruction again.

### WRONG ENTRY PENALTY

- If 4 consecutive invalid codes have been entered, a 5 minute delay period will be activated.
- A beep, in intervals of 5 seconds, will sound until the time delay period has expired.

### AUTOMATIC RE-LOCK

- A re-lock will occur within 4 seconds.

### LOW BATTERY INDICATOR

- If during the unlock cycle, a repeated beeping sound is detected, the battery is low and needs to be replaced.
- It is recommended that either “Energizer” or “Duracell” brands be used.
- To change the battery, please refer to the procedure, “Changing the battery”.

## USER OPERATIONAL INSTRUCTIONS

### CHANGE THE USER CODE

**Always perform the following instructions with safe door open.**

- Enter ( 0 0 0 0 0 ) 2 beeps sound.
- Enter the user code. 2 beeps sound.
- Enter the new 6 digit user code. 1 beep sounds.
- To verify, re-enter the same user code. 1 beep sounds.
- Enter the new user code to verify the new code has been accepted. 2 beeps sound.