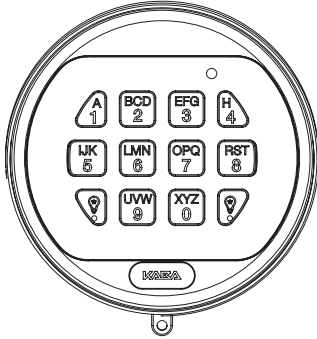


USER OPERATING INSTRUCTIONS

Keypads models 5715, 5750, 5750-K are compatible with 4200 (solenoid) and 4200M (motor), 3800/3801/3802/3803 Firmware, 4300 (solenoid) and 4300M (motor), 3800/3801/3802/3803 Firmware, 6040 (solenoid) and 6040M (motor) High Security electronic locks.

**FEATURES**

See Manager Instructions for additional features.

USER COMBINATION

- Open Lock
- Change Combination

KEYPAD BACKLIGHTING

- Press either lightbulb icon to illuminate panel keys.

WRONG TRY PENALTY

- Four (4) consecutive invalid combination initiates five (5) minute delay period.

LOW BATTERY WARNING

- Repeated LED flashing and beeping during opening indicates battery is low and needs immediate replacement.

AUDIO AND VISUAL SIGNAL

- Double signal - two (2) LED flashes and two (2) beeps - indicates entry is valid or accepted.
- Triple signal - three (3) LED flashes and three (3) beeps - indicates invalid or not accepted.

OPENING THE LOCK

1. Enter valid six (6) digit combination (factory set to 1-2-3-4-5-6).
2. The lock will confirm a valid combination entry with a double signal.
3. Within four (4) seconds, turn the handle to the open position.
4. Pull door open.

- **Invalid Combination Entry** - Lock will signal three (3) times.

IMPORTANT NOTE: *Change the combination before putting the lock into operation.*

WRONG TRY PENALTY

- Entry of four (4) consecutive invalid combinations starts a five (5) minute delay period.
 - LED flashed red at ten (10) second intervals.
- At the end of the delay period, two (2) more consecutive invalid combinations will restart the additional five (5) minute delay period.

NOTE: *Entry will not respond to keystrokes during delay period.*

CHANGING YOUR COMBINATION

CAUTION! *Always perform this operation with the door open*

1. Enter "zero" six times.
2. Enter your existing six (6) digit combination one time.
3. Enter your NEW six (6) digit combination two times.
4. If a mistake is made wait thirty (30) seconds and repeat steps **1 - 3**.
5. Test lock operation several times before closing the door.

CAUTION: When selecting a combination do not use birthday, phone number or other predictable data that could give correlation between the user and combination. Once the new combination has been set, do not share the combination. It is a secret.

- **Valid Combination Entry** - Double signal after valid six (6) digit combination is entered.
- **Invalid Combination Entry** - Triple signal indicates the old combination is still valid.


KEYPAD BACKLIGHT

- Press either lightbulb icon
- Panel keys will remain lighted for approximately 8 seconds
- The backlight feature will not adversely affect battery life if done in conjunction with normal anticipated keypad usage.”

BATTERY LOW WARNING

- Repeated LED flashing and beeping during an opening indicates that the battery is low and needs immediate replacement.
- Uses one (1) 9-Volt alkaline battery only. (Example: Duracell™ or Eveready™ alkaline batteries.) The replacement of batteries at least once annually is recommended.

If battery is depleted and will not allow lock to open, follow instructions below. Lock contains a non-volatile memory. Even with batteries removed, the lock will retain all programming.

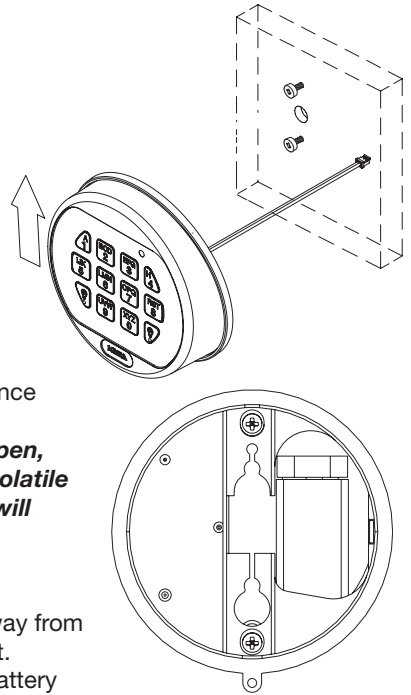

CHANGING YOUR BATTERY

1. Slide the keypad housing up and carefully pull away from mounting surface to expose battery compartment.
2. Remove the old 9-Volt alkaline battery from the battery compartment.
3. Remove the connector by unsnapping it from the two terminals on the top of the battery.

CAUTION! Hold on to battery terminal connector to avoid pulling the wires out of housing.

4. Press and hold the zero (0) key for ten (10) seconds before installing a battery.
5. Connect a new 9-Volt Alkaline battery to the battery clip.
6. Gently place the battery and the leads completely into the battery compartment.
7. Carefully position the keypad over the mounting screws and slide the keypad housing down. Ensure there are no wires or cables trapped between the input pad and the safe door. Pinched cables can result in a short circuit.

NOTE: The audit features, the software features, features associated with peripheral devices and systems, optional interconnect devices and their associated features, features involving the use of user keys, the duress feature, monitoring features, remote features, and other additional features have not been evaluated by UL. Models 8130 and 3190 keypads are not certified by UL, are not UL listed, and not approved for UL applications.”

Mounting Instructions available at www.kaba-mas.com.